

2000 AND PAS 2000 PODIUM UNIT ASSEMBLY GUIDE




Dimensions — Platform at 1.75M x Width — 0.85M x Depth 1.3M
Working Height — 3.75M (Max)
Dimensions — Folded Height — 3.76M x Width - 0.25M x Depth - 1.3M
Weight—41kg Safe Working Load - 150kg
44kg (std stabiliser)
Manufactured under an ISO9001:2008 Quality System
Complies fully with the Working at Height Regulations 2005 and PAS250
Specifications
Lightweight all Aluminium Construction

2000 AND PAS 250 2000 PODIUM UNIT ASSEMBLY GUIDE




1 X FOLDING FRAME
1 X PLATFORM
1 X DIAGONAL BRACE
1 X LADDER
2 X STABILISER

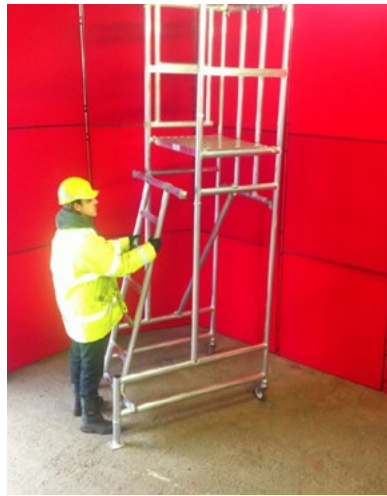

1) OPEN FRAME AND LOCK
MECHANISM



2) FIT PLATFORM AT
CORRECT HEIGHT

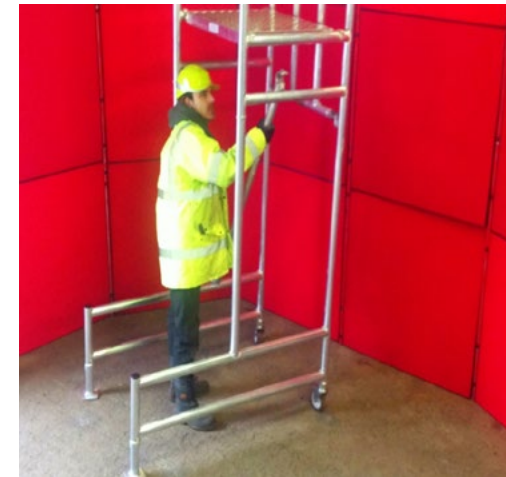


3) FIT DIAGONAL BRACE



4) POSITION UNIT AND
LOCK CASTORS




5) CLIP UPPER BRACE OF LADDER
ABOVE RINGS ON VERTICALS
WITH ASSEMBLED HOOKS ON
TOP

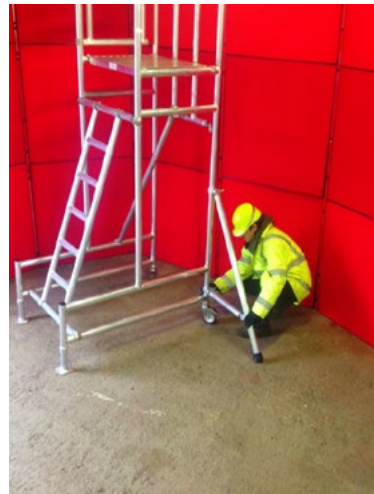

6) FIT STABILISERS
TO BACK VERTICALS




7) USE LADDER TO
ACCESS PLATFORM

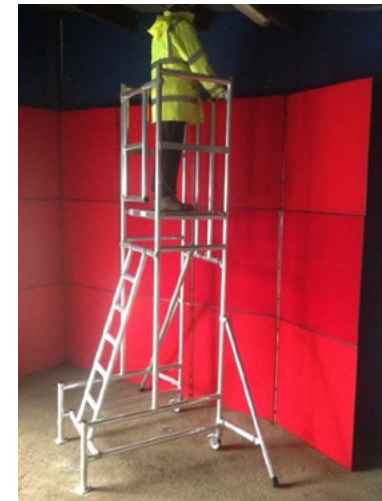


8) CLOSE AND
LOCK GATE


IMPORTANT SAFETY NOTES

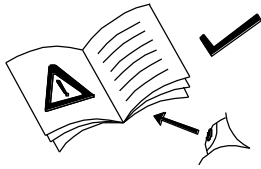


ALWAYS READ THE INSTRUCTIONS BEFORE USING PODIUM

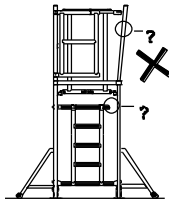


NEVER USE A PODIUM WITH DAMAGED OR MISSING COMPONENTS

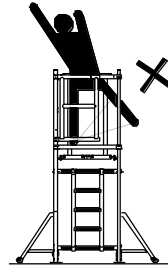


NEVER OVERREACH

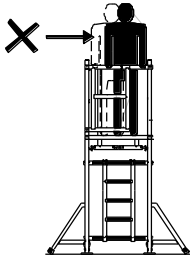


NEVER HAVE MORE THAN ONE PERSON ON THE PLATFORM

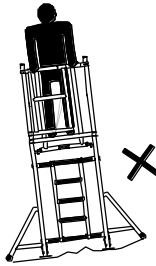


NEVER USE ON UNEVEN OR SLOPING SURFACES

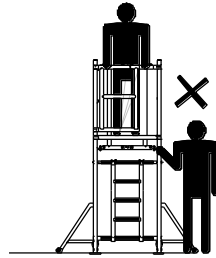


DO NOT MOVE PODIUM IF A PERSON IS STILL ON IT

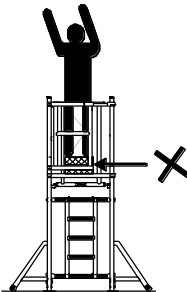


NEVER USE BOXES FOR EXTRA HEIGHT, STAND ONLY ON THE PLATFORM

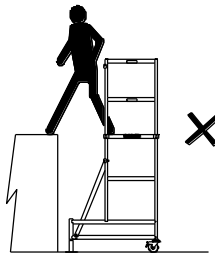

NEVER USE PODIUMS AS A MEANS OF ACCESS TO ANOTHER PLACE.

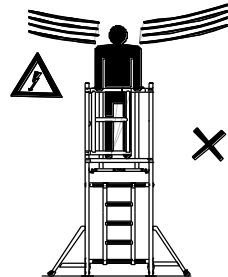

NEVER USE PODIUMS NEAR ELECTRICAL POWER LINES

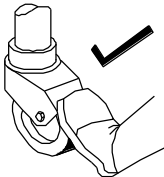

ALWAYS LOCK ALL CASTORS WHEN PODIUM IS SITED, AND BEFORE USE.

BE AWARE OF THE FOLLOWING:-

- A. DO NOT USE ON LOOSE OR SLIPPERY SURFACES.
- B. NEVER STAND ON THE ACCESS LADDER TO WORK.
- C. WORKING PLATFORM MUST BE LEVEL.
- D. INSPECT BEFORE USE.
- E. ONLY ASCEND OR DESCEND THE LLWP USING THE ACCESS PROVIDED.
- F. FACE THE FOLDING BACK SECTION WHEN ASCENDING OR DESCENDING.
- G. ENSURE THE GATE IS CLOSED AND LOCKED BEFORE USE.
- H. BEWARE OF FINGER TRAPS.
- J. TO MOVE UNIT UNLOCK GATE AND DISMOUNT, UNLOCK CASTORS AND RE-LOCATE.
- K. IF IN DOUBT DO NOT GUESS CONSULT YOUR SUPPLIER.
- L. SEE OVERLEAF FOR COMPONENT CHECKLIST