

UTS COMPATIBILITY 1450/850 250

Instruction Manual

Mobile Access Tower

3T - Through the trap method



Instruction Manual

This Assembly Guide is intended to provide you with step-by-step instructions on how to erect your Mobile Access Tower (MAT) with ease and safety, using the 3T (through the trap) method.

You should read and understand all notes and diagrams, including the parts list for each height, before commencing assembly. Personnel should be qualified or competent to erect this tower. Please consult the PASMA's code of practice for full information on the use of Mobile Access Towers.

Remember to do a risk assessment of the area where the tower is to be used before commencing erection.

This instruction manual shall be available on the location of use of the mobile access and working tower.

This mobile access and working tower shall only be used according to this manual without any modification.

Mobile access and working towers must only be used in accordance with national regulations.

Manufactured to: BSEN1004-1:2020 CLASS 3 8/12 XXXD

Instruction Manual EN 1004-2 en x cz x es x fr x pl

UTS COMPATIBILITY 1450/850 250

Instruction Manual

Mobile Access Tower

Contents	Page
Description	3
Safety Notes & Fittings	3
Inspection Care and Maintenance	5
Components and Weights	8
Assembly	9
Dismantling	16
Configurations and Weights	17
Risk Assessment Form	19

Description, Safety Notes & Fittings

UTS Compatibility 1450/850 250

The UTS 1450/850 250 tower is certified by BSI to meet the requirements of BS EN 1004 - the design standard for mobile access towers. Additionally, through vigorous testing and comparatives carried out by Lloyds British and which they consider confirm conformance with the PASMA Compatibility Protocol, the UTS tower can provide either a partial or dominant system when used in conjunction with the BoSS ladder span scaffold tower.

Copies of the BSI certification and the Lloyds British test report are available from UTS upon request

The UTS 1450/850 250 tower is manufactured to BS EN 1004:2004 CLASS 3 8/12 XXXD and KITEMARK MARKED. The KITE MARK is the universal symbol that reassures the user that the product is certified to BSI stated standards.

- Instructions for erection and use to be followed carefully.
- A risk assessment should always be carried out before erecting your MAT (Mobile Access Tower).
- You will find a standard risk assessment form at the back of this instruction manual.
- The UTS 1450/850 250 has a maximum working height of 8 metres outdoors and 12 metres indoors.
- The maximum permissible load on the UTS 1450/850 250 tower is 950kgs and evenly distributed on each platform is 275kgs. This must not be exceeded over 2 work platforms, not including rest platform.
- Damaged or incorrect components shall not be used.

Safety Notes

ERECTION & DISMANTLING - THE 3T METHOD

Towers should be erected following a safe method of work, there are two approved methods recommended by 'prefabricated access suppliers and manufacturers' (PASMA) in co- operation with the health and safety executive (working at height regulations).

The method used for erecting and dismantling the UTS 1450/850 250 tower is the 3T METHOD (through the trap). This method ensures the operators erecting the tower position themselves in the trapdoor of the platform to add or remove horizontal guardrail braces for the level above the platform.

NEVER STAND ON AN UNGUARDED PLATFORM.

Before assembly or erection of this Mobile Access Tower (MAT) please ensure that...

- A risk assessment has been done and all safety equipment is on site.
- The ground conditions will take the working loads of MAT as specified.
- Always check that the MAT is vertical, (Level, slope, uneven ground etc.) if levelling is required make sure you Adjust Legs (Part No.1026312-A2), in line with instructions (use spirit level).
- Beware of (overhead) obstructions – live wires, electrical apparatus or moving parts of machinery or other.
- Wind conditions are within limits as specified. (Refer to page 4)
- Do not use boxes, ladders, or other devices on the platform to gain additional height.
- If in doubt DO NOT ERECT.
- Check that all components are on site and that they are in good working order before use (refer to the components and quantities shown at each stage). Auxiliary equipment and safety equipment. (ropes, etc)
- For your safety, during assembly and erection it is recommended that temporary horizontal guardrail braces be used. **All working platforms MUST have horizontal guardrails fitted.**
- The tower should always be accessed from the inside using the ladder frames provided.
- Never climb up the outside.
- Do not use the guardrail braces as a rung or step.
- It is recommended that 2 persons erect this tower.
- The assembled tower should not be used as a means of access to other structures unless suitably tied.
- Beware of horizontal forces (e.g., when using power tools on an adjacent structure), which could generate instability or overturning of the tower.
- Maximum horizontal force 20kgs.

STABILISERS & BALLAST

Compatible stabilisers or outriggers and ballast shall always be fitted when specified. All stabilisers must be of the same manufacture when used on the scaffold tower. When using the MAT externally compatible stabilisers must be fitted.

Should ballast be required, a platform should be positioned on the lowest rung and the weights should be firmly attached to it and evenly distributed. For advice on ballast contact your supplier.

LIFTING OF EQUIPMENT

Tools and other equipment should be hauled up by a person on the platform using rope or similar, through the trapdoor of the platform or within the tower footprint.

Please see footprint guide on page 14.

Safe working loads of platform and tower not to be exceeded.

MOVING THE TOWER AND LEAVING IT UNATTENDED

- Adjust the stabilisers to provide ground clearance.
- Unlock the castor wheels.
- Move with manual force only, and only from the base.
- Beware of (overhead) obstructions – live wires, hanging apparatus or other objects.
- Do not move with people or material on the tower.
- Do not move the assembled MAT if wind speeds exceed a moderate breeze. Relock the castors and readjust the stabilisers once in the new position.
- When moving the tower over rough or uneven sloping ground remove all tools.
- Do not move the assembled tower if over 4 metres high.
- Recheck that the MAT is vertical or needs readjustment of legs before ascending. (Using spirit level)

It is recommended that towers should be tied to a solid structure, when left unattended.

TIES

When ties are required, they should be in accordance with table 17 of BS 5973:1990 and table 24 of BS 5975:1982.


Always tie to a solid structure.

The tie frequency should be at 4 metre intervals or less vertically.

FITTING TOE-BOARDS

1 piece folding toe board, fold out over platform making sure location angle rests fits securely on side of platform.

4 piece folding toe board, attach toe-board clips over the outer most deck claws and clipping onto the tube as illustrated. Insert toe-board into the slots as shown...

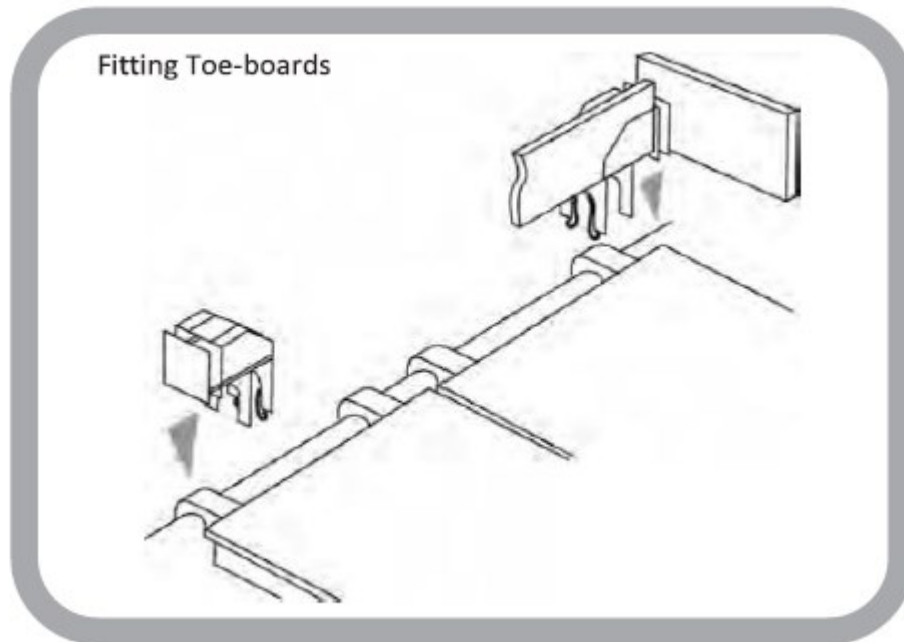

LIFTING OF INDIVIDUAL TOWER COMPONENTS

Raising and lowering components, tools and/or materials by rope should be conducted within the tower base (i.e. within the area bounded by the stabilisers). Ensure that the safe working load of the supporting decks and the tower structure is not exceeded.

Check for environmental changes before every use. (ie: all weather conditions) Refer to next page for wind effects.


CHECK LIST, INSPECTION CARE AND MAINTENANCE FOR MOBILE ACCESS TOWERS

- All components should be inspected before use to ensure that they are not damaged or broken, particularly the welds.
- ANY damage to ANY part particularly tubular members, castors, platform decking MUST be replaced.
- Adjustable leg threads should be cleaned and lightly oiled.
- All locking claws should be cleaned, and the locking mechanism checked for operation.
- When storing your MAT, please ensure that all components are neatly stored and not left lying around where they could be stood on or damaged.
- When transporting the MAT always tie the components down so that they do not move around and get damaged.
- Should the tower be left unattended it should be tied to a suitable structure and on reuse ALWAYS check that the tower is vertical and safe before ascending correct and complete structure.
- The MAT is not designed to be lifted or suspended as a complete structure.
- Always keep this instruction manual safe.
- Broken, damaged or incorrect components must never be used. The equipment shall be quarantined and assessed for replacement repair or destruction.

WIND EFFECTS

- Beware of high, gusty, or moderate breeze conditions in exposed areas. It is recommended that in wind speeds over a Moderate Breeze (see Beaufort Scale below) that work on the tower is stopped and reassessed. If the wind becomes a Strong Breeze, (see Beaufort Scale below) the tower should be tied to a rigid structure. If the wind is likely to reach Gale Force (see Beaufort Scale below) or over, work should be stopped, and the tower should be dismantled.
- Beware of tunnelling effect caused by open ended buildings, uncladded buildings and building corners.

Wind	Beaufort Scale 10 Meters above ground	Force	Speed in m.p.h.	Speed in knots
Moderate Breeze	Raises dust and loose paper, small branches move.	4	13–18	11–16
Strong Breeze	Large branches in motion, telegraph wires whistle.	6	25–31	22–27
Gale Force	Walking is difficult, twigs break off trees.	8	39–46	34–40

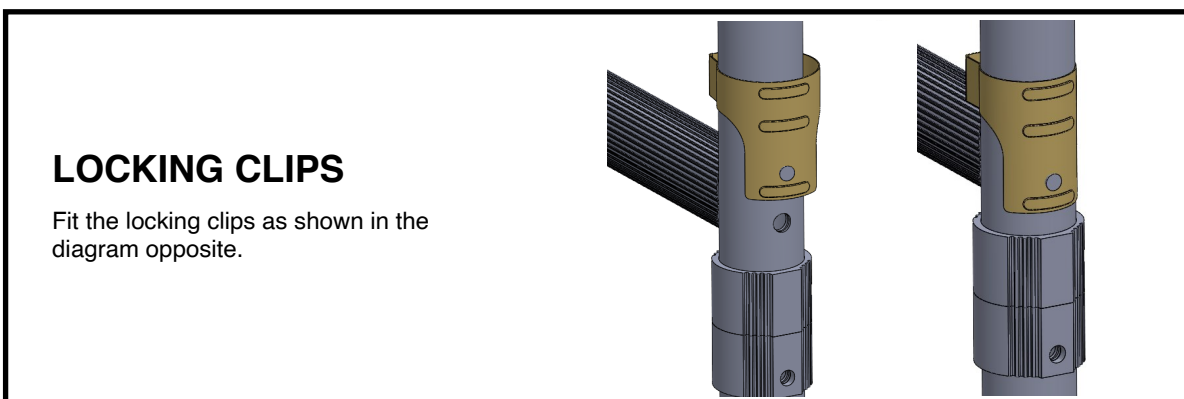


LOCKING CASTORS

Castor wheels should be pointed outwards at approximately 45 degrees and locks engaged as shown opposite.

FITTING STABILISERS

Attach a stabiliser to each corner of the tower at approximately 45 degrees for maximum stability (refer to relevant illustrations) and attach the clamps where indicated.

On the S2 stabiliser use the telescopic leg for adjustment on uneven ground. Make sure that all stabilisers are firmly in contact with the ground when using the structure.

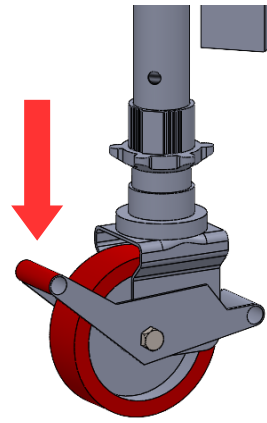


CORRECT FITTING OF HORIZONTAL BRACING

THE CORRECT FITTING OF HORIZONTAL BRACING IS IMPORTANT.

The diagrams opposite illustrate the CORRECT brace positions.



REMEMBER: Always fit braces DOWNWARD or from the inside facing OUTWARD – BUT NEVER INWARD

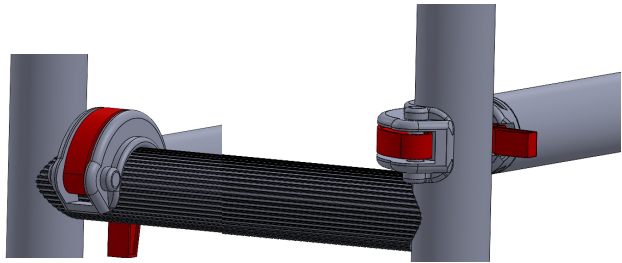

BRACE CLAMP LOCKING

Ensure that the brace clamp is locked as shown.

Always make sure the brace is not clamped too close to the weld as indicated by the arrow on the drawing on the right.

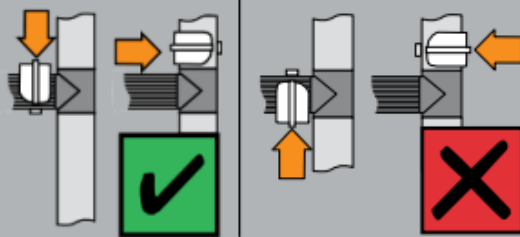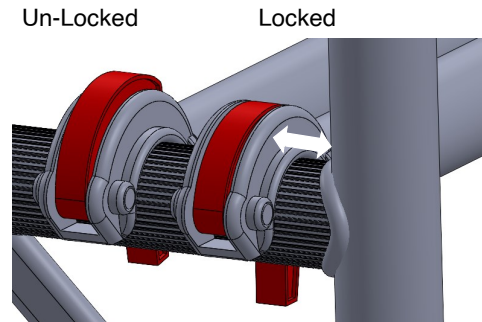


FITTING ADJUSTABLE LEGS

Take the adjustable leg assembly complete with its castors, make sure that all the adjusting nuts are positioned down at the castor and slide them into the vertical tube, turn the base unit the right way up and with the aid of a spirit level placed on the platform, the adjusting nuts can be used to level the structure. (and not to gain additional height).



Identifying Components and Their Weights

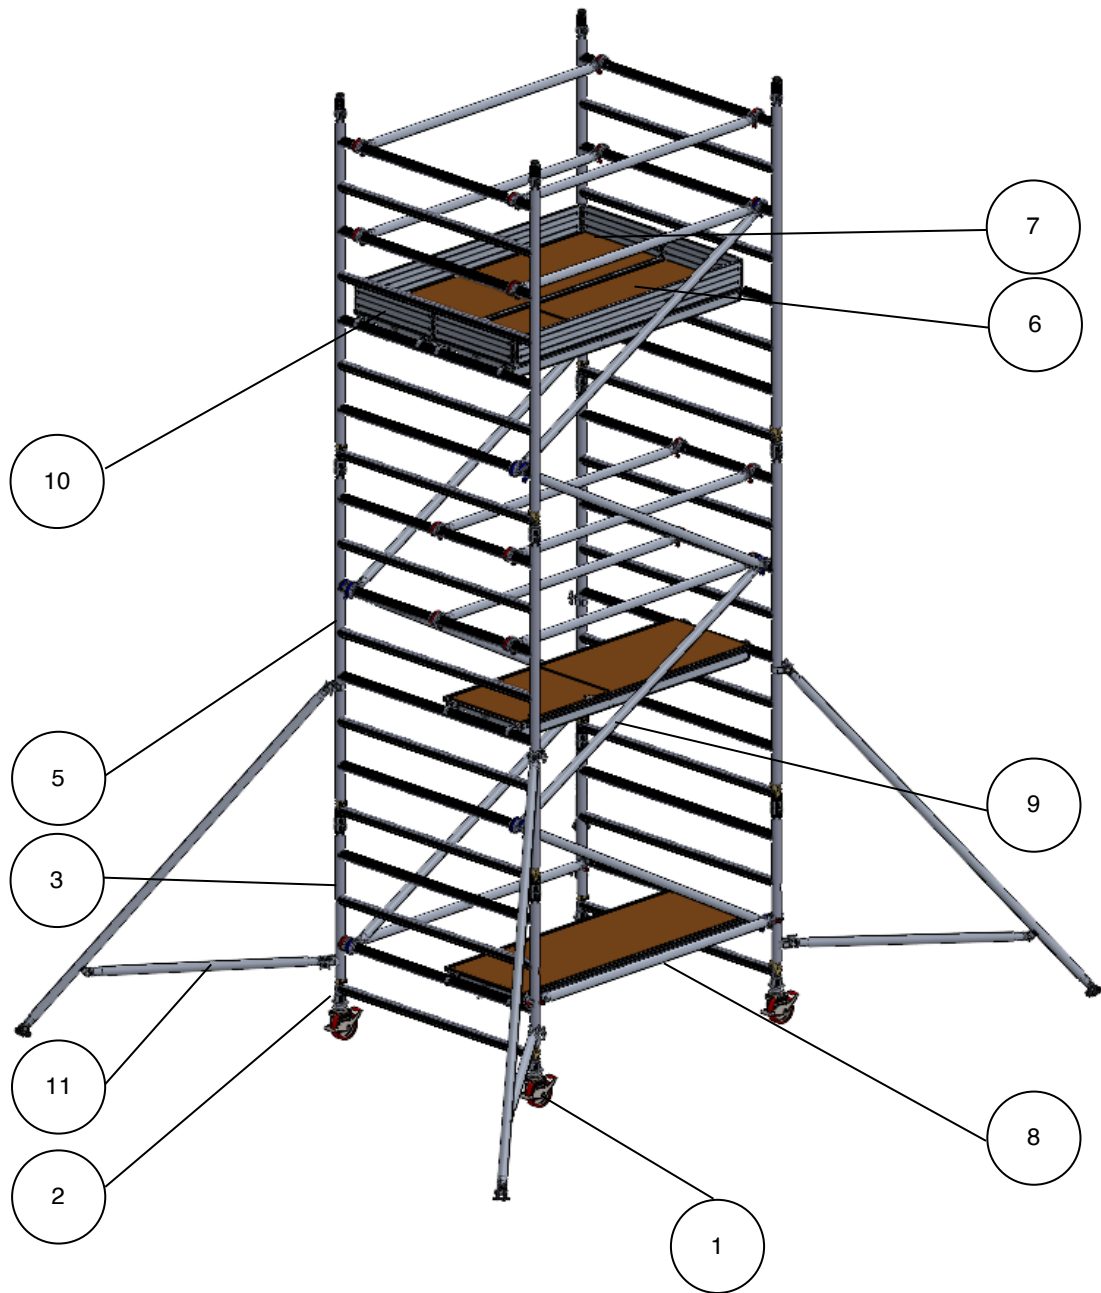

Note:

When building structures over 4.2 metres remove platform and 4 horizontal braces from platform height at 2.2 metres and use to complete structure.

Tower Components and Approx. Weights

Item	Description	Weight (Kg)	Item	Description	Weight (Kg)
1	150mm Locking Caster	3.4	7	1.8m Fixed Platform	11.8
2	Adjustable Leg 500mm	1.1	8	1.8m Horizontal Brace	2.1
3	1m 4 Rung Frame	5.4	9	2.1m Diagonal Brace	2.2
4	1.5m 6 Rung Frame	8	10	Complete Toe Board Set	14
5	2m 8 Rung Frame	10.4	11	S1 Stabiliser	4.1
6	1.8m Trapdoor Platform	12.7	12	S2 Stabiliser	5.9

Assembly Procedure

UTS recommends that a minimum of two people is required for the assembly of the UTS 850/1450 25 tower. Only climb the tower from the inside using the ladder section.

Access platform/working height;

For even platform height towers (2m/4m/6m) you MUST start with a 2 RUNG FRAME.


For odd platform height towers (3m/5m/7m) ALWAYS start with a 4 RUNG FRAME.

For intermediate height platform towers (2.5m/3.5m/4.5m) ALWAYS start with a 3 RUNG FRAME.


Platform Heights in Meters	Frame at Base	Frame at top
1.2, 3.2, 5.2, 7.2, 9.2, 11.2	4 Rung	4 Rung
1.7, 3.7, 5.7, 7.7, 9.7, 11.7	2 Rung	3 Rung
2.2, 4.2, 6.2, 8.2, 10.2, 12.2	2 Rung	4 Rung
2.7, 4.7, 6.7, 8.7, 10.7	3 Rung	4 Rung

Example 4.2m Platform height assembly

1. Insert adjustable leg assembly (with castors or base plates) into the base of a rung end frame, then repeat this with the other rung end frame.
Lock all castor wheels

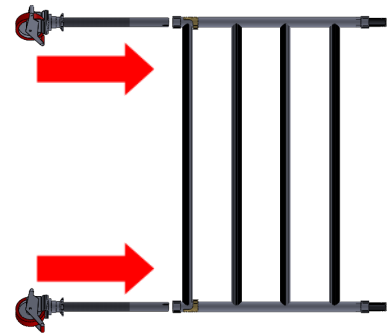


2. Attach one horizontal brace to the second rung of the end frame, claws facing downwards.
This frame will now be self-supporting.

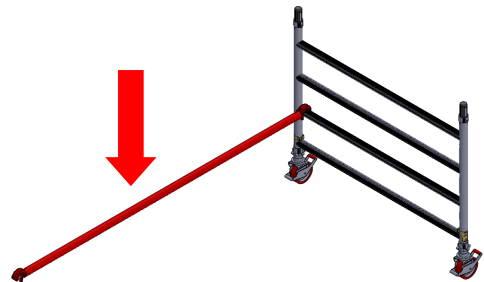

3. Position the frame as shown. Connect the other end of the horizontal brace to the second end frame. Now connect the frames using a second horizontal brace on the opposite side, attach inside of the rung frame just above the second rung, claws facing outwards, this will square the tower.

Check tower is vertical (Using spirit level)

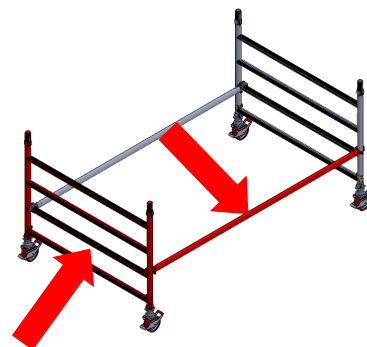

PLEASE TAKE NOTE

Never place the platform on the guardrail frame

Always climb from the inside of the frame – never the outside. When working on the platform never overreach

The end frames should provide a firm hand hold.


Insert 8 rung frames to correspond with the 4 rung frames (fig. 3) and lock the locking clips (refer to page 8).

4.

Attach diagonal braces on both sides from the 2nd rung to the 6th rung of the structure, in opposing directions.

Place a trap door deck platform on the 8th rung. Attach wind locks (refer to page 9).

If necessary use a temporary platform on the first rung to help reach.


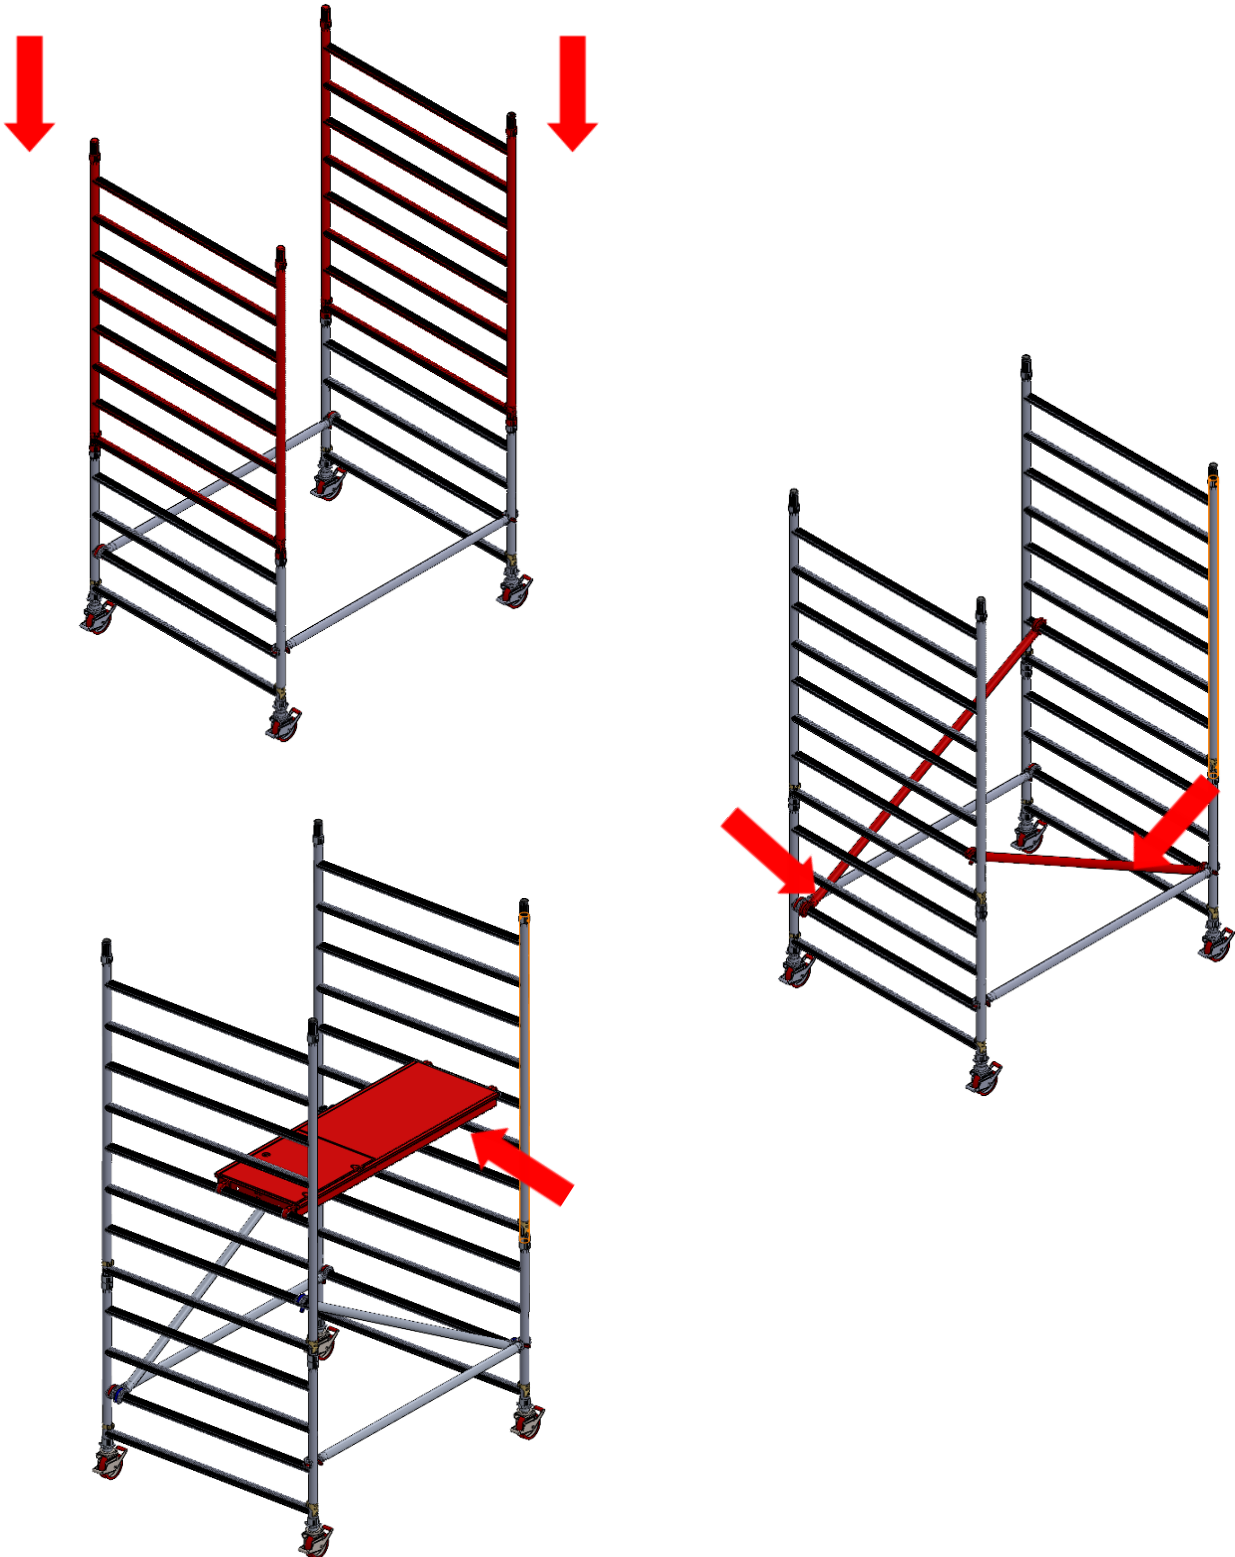


Attach stabilisers as required for working height (see table page 18).


5.

Climb the ladder and from a protected through the trapdoor position, attach horizontal guardrail braces to the 10th and then 12th rungs, on both sides of the platform.

Never climb onto a platform that is not fully guarded. Guardrails should be 1 and 2 rungs above platforms in all cases.

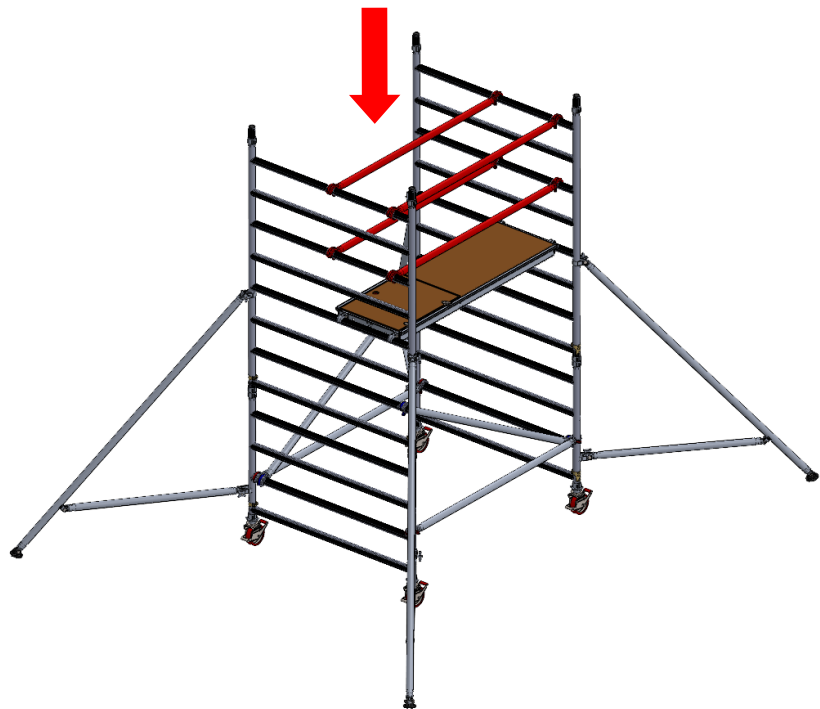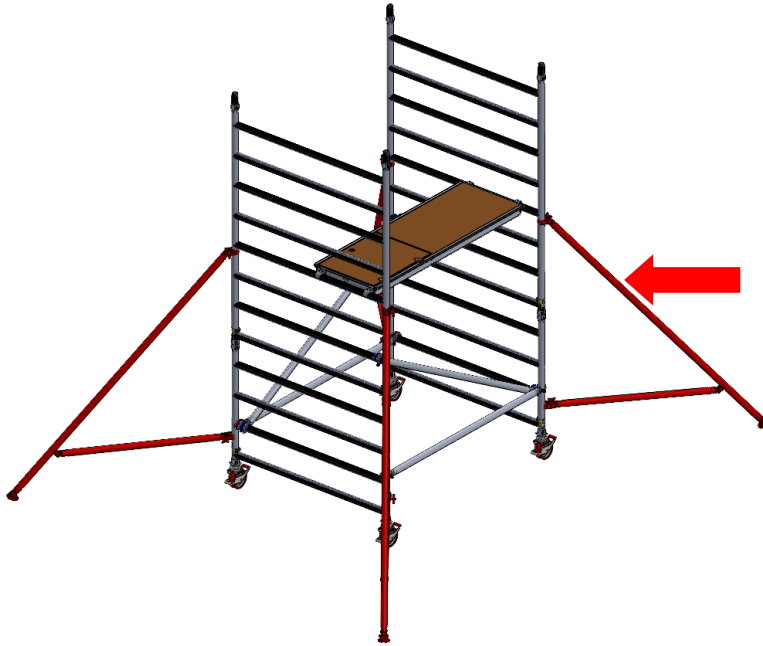


6. Attach 2nd pair of diagonal braces following on from the previous ones. Attach the next 8 rung frames and lock clips.

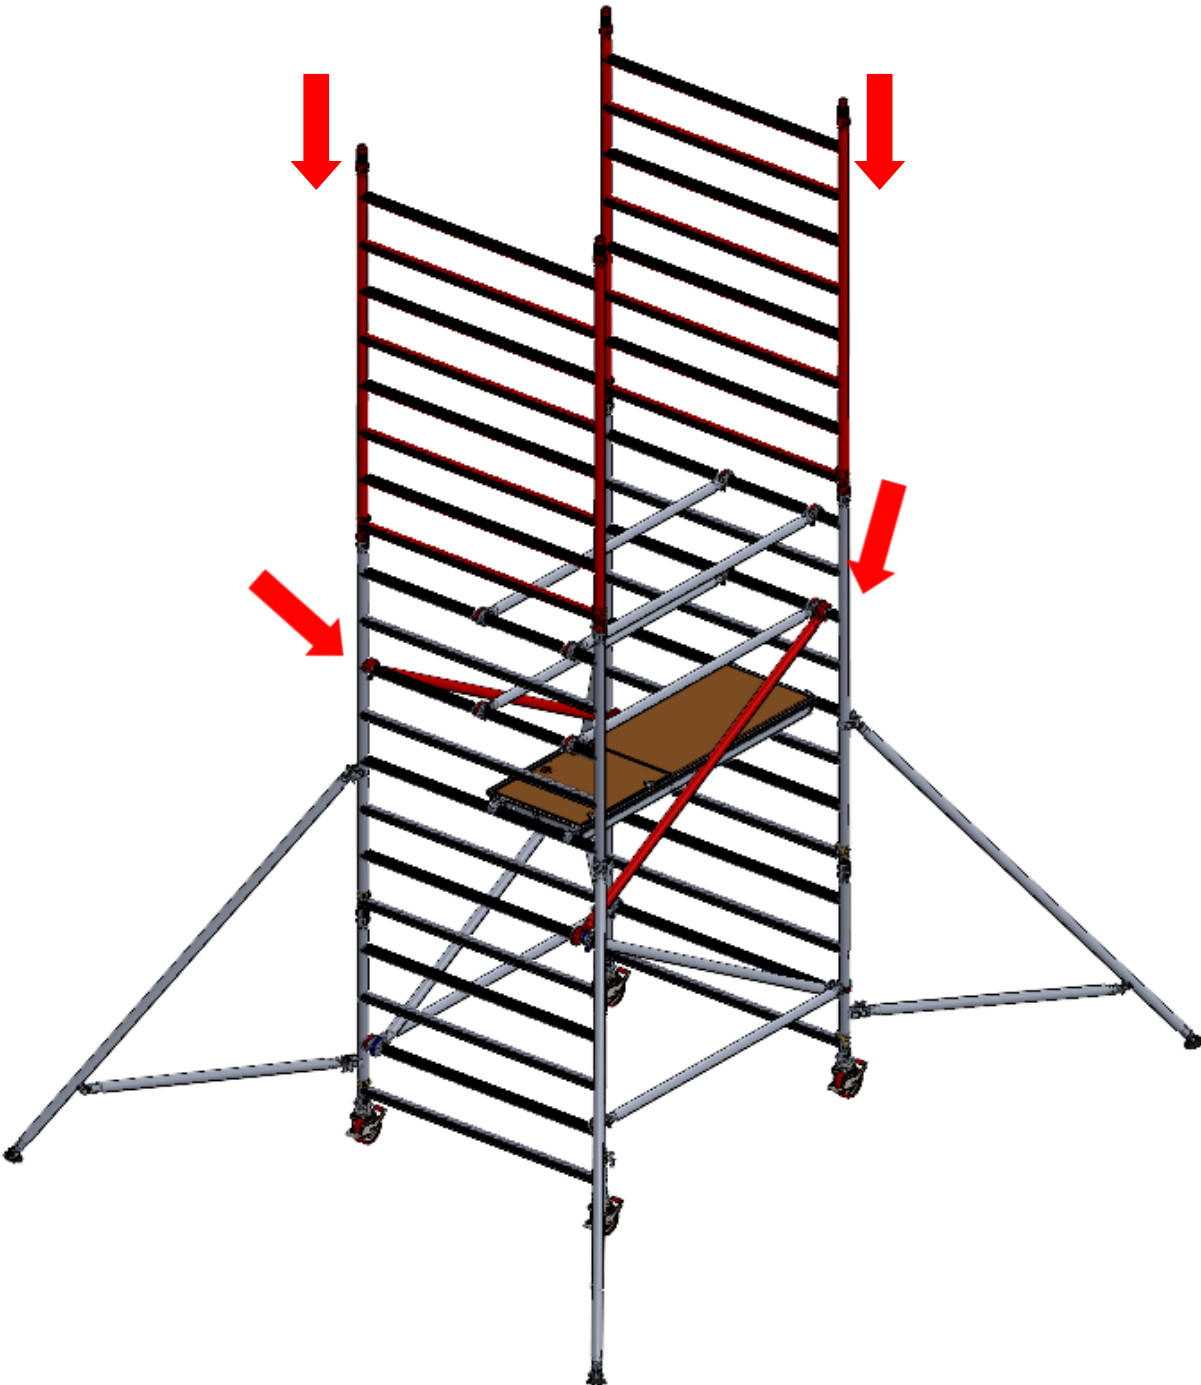

7.

If completing the tower at this height (4m), continue with step 8. When building beyond this level, repeat steps 4, 5 and 6 until desired level is achieved, then complete the tower with steps 8 and 9. Reuse the trap door platform from 2nd rung on the final height. Engage windlocks (refer to page 9).

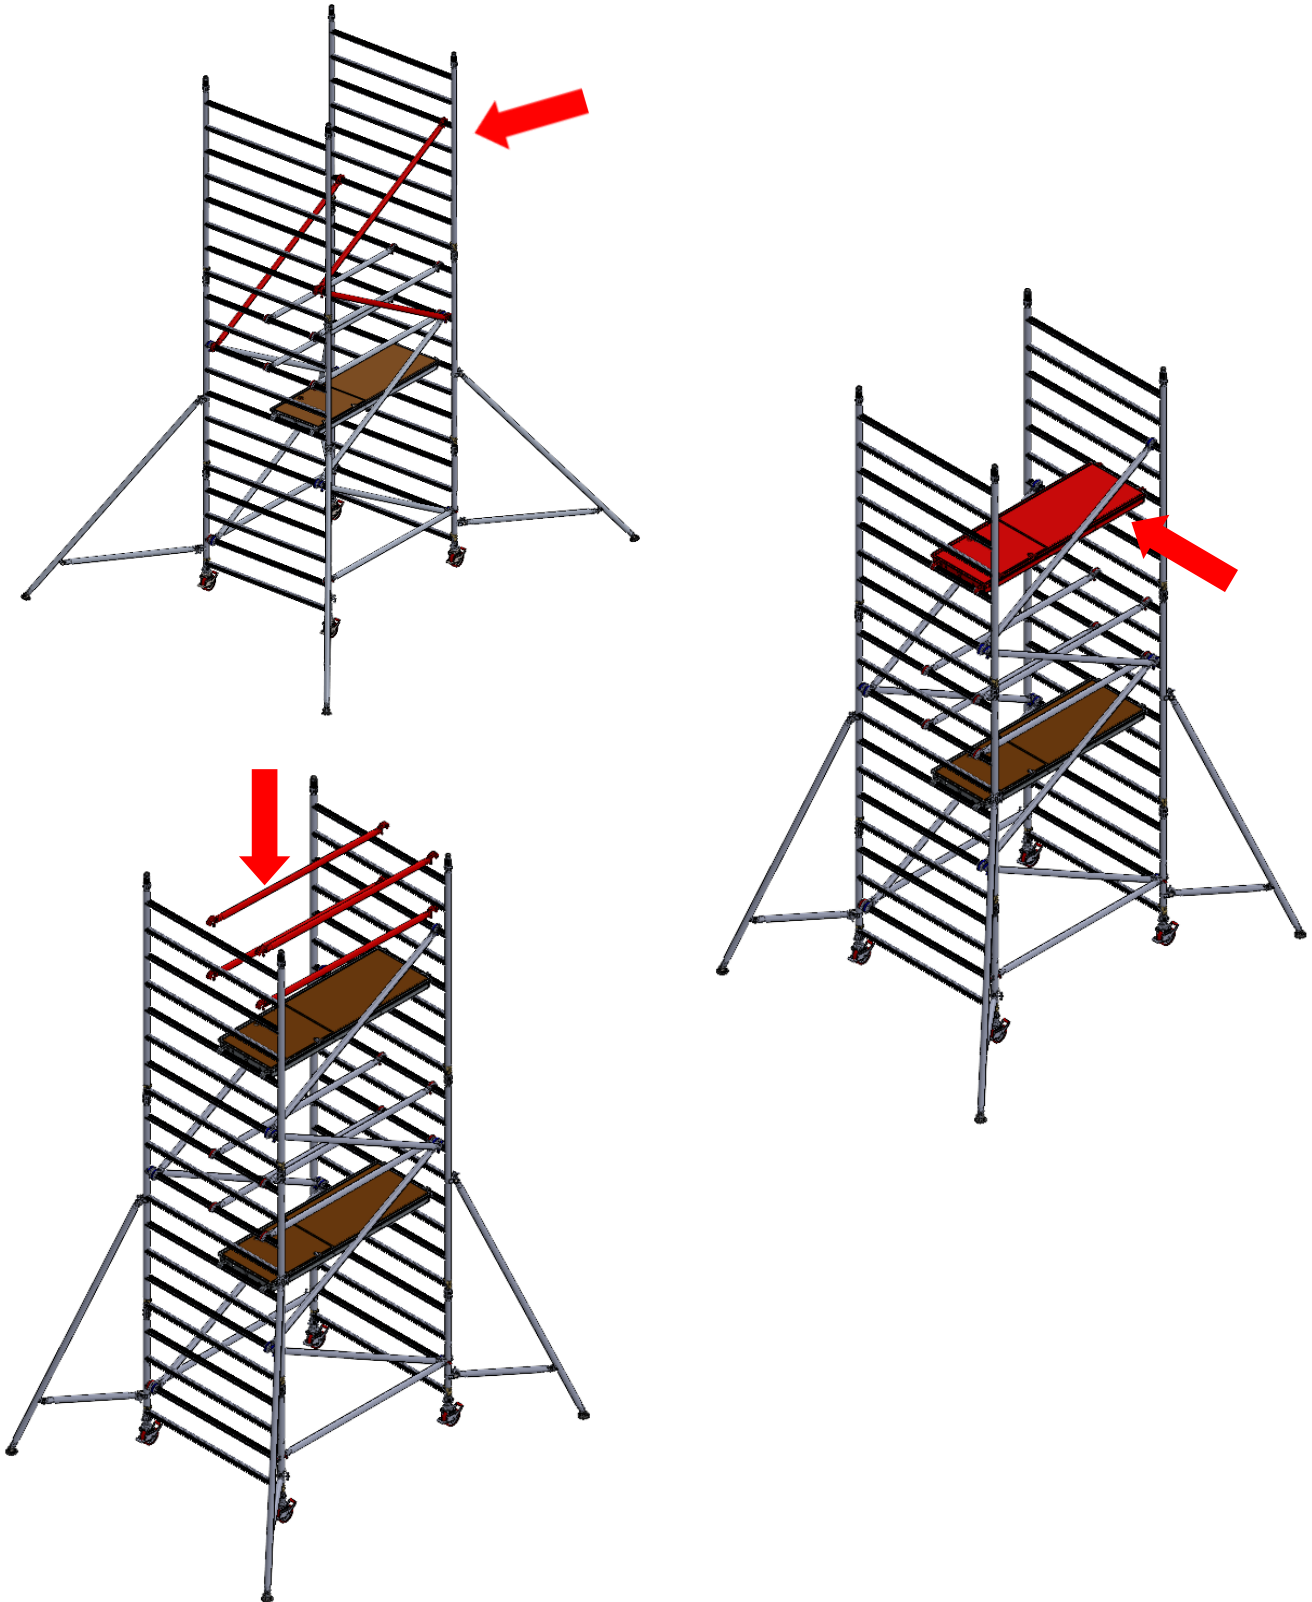

8.

Fit the final diagonal braces as shown. This stage will provide a platform height of 4m. Attach diagonal braces as per fig. 7. The 1st rung trap door platform should be moved up to the 8th rung, the fixed platform can now be fitted alongside it.

LOCK WIND LOCKS (refer to page 9).

Climb up the ladder and from a protected 'through the trapdoor' position, fit horizontal guardrail braces to the 9th and then the 10th rungs on both sides of the tower. Complete the tower assembly by following step 9.



9. Fit toe boards to the working platforms. (see instructions on page 9)



Maximum distance between platforms should not exceed 2.25m.

Maximum distance to first platform should not exceed 3.4m

Dismantling

The dismantling procedure should follow the assembly steps in reverse order, take particular attention about the removal of guardrails and platforms.

You should ensure that you are standing in a safe position and always protected by guardrails NEVER remove diagonal braces or stabilisers prematurely.

After removing the toe-boards the operator disengages the horizontal guardrail brace clamps furthest from the trap door, horizontal guardrail braces are then removed with the operator positioned through the trap door before descending to the lower level, from where the upper platform and extensions/guardrail frames can be removed.

NOTES:

DO NOT OVER-REACH and NEVER DROP COMPONENTS when dismantling always lower them to the ground.

STABILISERS


Attach one stabiliser to each corner of tower at approx. 45 degrees. The bottom clamp should be fitted as low as possible, refer to the diagram opposite. Ensure that all four rubber feet are in contact with the ground and that the clamps are secured. Position stabilisers as shown in the diagrams. **All stabilisers must be from the same manufacturer. Mixing & matching compatible stabilisers is not permitted.**

When using the S2/SP10 stabilisers, always extend the telescopic legs to their maximum position and lock into position with the interlock clip.

When moving the tower lock each telescopic leg just clear of the ground, unlock castors ensuring area is firm and clear of all obstructions both on the ground and above.

After moving check all castors are firmly on the ground and locked, and that the tower is vertical. Re-position stabilisers as above.

STABILISERS—S1/SP7

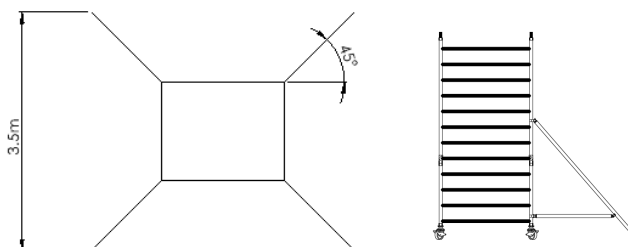


Static Stabiliser maximum platform height

Single Width 850
Indoors 8.2m, Outdoors 8.2m

Double Width 1450
Indoors 8.2m, Outdoors 8.2m

STABILISERS—S2/SP10

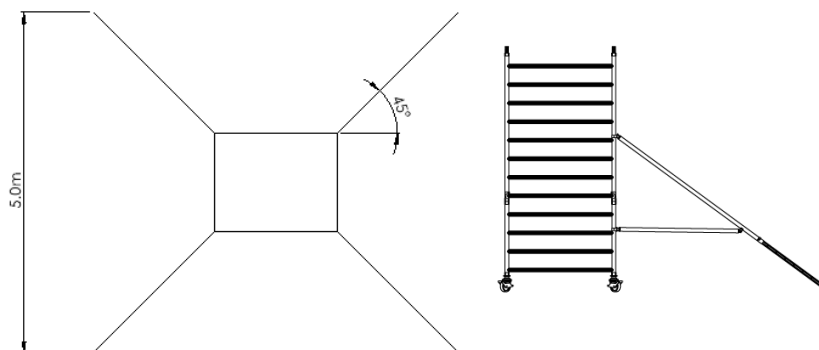

Telescopic Stabiliser maximum platform height

Single Width 850
Indoors 8.7m-12.2m

Double Width 1450
Indoors 8.7m-12.2m

850 Single Width

Configurations to BSEN 1004:-1:2020

Available in two lengths: 1.8m & 2.5m

Working Height (M) Platform Height

INTERNAL AND EXTERNAL USE

Description	INTERNAL AND EXTERNAL USE															INTERNAL USE ONLY								
	3.2 1.2	3.7 1.7	4.2 2.2	4.7 2.7	5.2 3.2	5.7 3.7	6.2 4.2	6.7 4.7	7.2 5.2	7.7 5.7	8.2 6.2	8.7 6.7	9.2 7.2	9.7 7.7	10.2 8.2	10.7 8.7	11.2 9.2	11.7 9.7	12.2 10.2	12.7 10.7	13.2 11.2	13.7 11.7	14.2 12.2	
Castors	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Adjustable Leg Unit	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
850 x 4 Rung Frame	2	2				2	2				2						2	2					2	2
850 x 6 Rung Frame	2			2		2					2						2						2	
850 x 8 Rung Frame	2		2	2	4	2	2	4	6	4	6	8	8	6	8	8	10	8	10	10	12	10	12	12
1.8m or 2.5m Fixed Platform																								
1.8m or 2.5m Trap Door Platform	1	1	1	2	2	2	2	2	3	3	3	4	4	4	4	4	5	5	5	5	6	6	6	6
1.8m or 2.5m Horizontal Brace	6	6	6	6	10	10	10	10	14	14	14	18	18	18	18	18	22	22	22	22	26	26	26	26
2.1m or 2.7m Diagonal Brace	2	3	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	22	23
Folding Toe Board Set Aluminium	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Instruction Manual	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
S1 Stabiliser			4	4	4	4	4	4	4	4	4	4	4	4	4									
S2 Stabiliser																4	4	4	4	4	4	4	4	4
Approx. Tower Shelf weight (Kgs) 1.8m)	75.2	83.6	103.6	123.2	138.3	146.7	152.5	160.3	187.2	195.6	201.4	209.2	236.1	244.5	250.3	265.3	292.2	300.6	306.4	314.2	341.1	349.5	355.3	355.3
Approx. Tower Shelf weight (Kgs) 2.5m	82.9	91.5	111.5	135.5	151	159.6	165.6	173.6	205.1	213.7	219.7	227.7	259.2	267.8	273.8	289	320.5	329.1	335.1	343.1	347.6	383.2	389.2	389.2

1450 Double Width

Configurations to BSEN 1004:-1:2020

Available in two lengths: 1.8m & 2.5m

Working Height (M) Platform Height

INTERNAL AND EXTERNAL USE

INTERNAL USE ONLY

Description	INTERNAL AND EXTERNAL USE										INTERNAL USE ONLY												
	3.2 1.2	3.7 1.7	4.2 2.2	4.7 2.7	5.2 3.2	5.7 3.7	6.2 4.2	6.7 4.7	7.2 5.2	7.7 5.7	8.2 6.2	8.7 6.7	9.2 7.2	9.7 7.7	10.2 8.2	10.7 8.7	11.2 9.2	11.7 9.7	12.2 10.2	12.7 10.7	13.2 11.2	13.7 11.7	14.2 12.2
Castors	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Adjustable Leg Unit	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
1450 x 4 Rung Frame		2	2			2	2			2	2			2	2			2	2			2	2
1450 x 6 Rung Frame		2				2				2				2				2				2	
1450 x 8 Rung Frame	2		2	2	4	2	4	4	6	4	6	8	6	8	8	10	8	10	10	10	12	10	12
1.8m or 2.5m Fixed Platform	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
1.8m or 2.5m Trap Door Platform	1	1	1	1	2	2	2	2	3	3	3	4	4	4	4	4	4	4	4	4	4	4	4
1.8m or 2.5m Horizontal Brace	6	3	6	6	10	10	10	10	14	14	14	18	18	18	18	18	22	22	22	22	26	26	26
2.1m or 2.7m Diagonal Brace	2	3	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Folding Toe Board Set	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Instruction Manual	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
S1 Stabiliser			4	4	4	4	4	4	4	4	4	4	4	4									
S2 Stabiliser															4	4	4	4	4	4	4	4	4
Approx. Tower Shelf weight (Kgs) 1.8m	90.8	99	120.2	127.6	155.7	163.9	170.9	178.3	206.4	214.6	221.6	229	257.1	265.3	272.3	286.9	315	323.2	330.2	337.6	365.	373.9	380.9
Approx. Tower Shelf weight (Kgs) 2.5m	102.2	110.6	131.8	139.4	172.1	180.5	157.7	195.3	228	236.4	243.6	251.2	283.9	292.3	299.5	314.3	347	355.4	362.6	370.2	402.9	411.3	418.5

RISK ASSESSMENT COMPLETION FORM

NO	DATE
Site & Location	
Assessment carried out by:	
Signed	
MAIN ACTIVITY/SITUATION	

NOTE

A – Personnel at Risk Employee <input type="checkbox"/> E Contractor <input type="checkbox"/> C Public <input type="checkbox"/> F	B – Severity Negligible <input type="checkbox"/> 1 Minor Injury <input type="checkbox"/> 2 Serious Injury <input type="checkbox"/> 3 Major Injury <input type="checkbox"/> 4	C – Probability Impossible <input type="checkbox"/> 1 Improbable <input type="checkbox"/> 2 Remote <input type="checkbox"/> 3 Occasional <input type="checkbox"/> 4	Probable <input type="checkbox"/> 5 Frequent <input type="checkbox"/> 6
---	---	--	--

NO	Activity/Location Materials/Tools etc.	A	B	C	Hazards Identified	Equipment to be used to minimise risk	B	C	Risk Rating (B x C)	Risk Rating (B x C)	Action By

Risk value key: 1 – 4 = Acceptable, 5 – 9 = Medium – Investigate and where practicable reduce the risk, 10 – 14 = High – Action must be taken to reduce the risk
15 – 24 = VERY HIGH – RISK IS TOO HIGH TO START WORK OR CONTINUE, WORK MUST BE STOPPED

Notes: